

# ADB Potenza Remote Instruction Manual

## Programming Remote Control

Your remote control can handle several devices. However, first you have to set up your remote control for your equipment. You can do this in one of the following ways:

### Brand Setup

First, find the manufacturer of your equipment on the Brand Codes list. If the manufacturer's brand is not listed, go to **Automatic Search** below. To set up your remote control follow these steps:

1. Turn the device on.
2. Press TV / AUD / DVD / AUX / STB depending on what mode you want to handle and then hold RCU SETUP until the device key blinks twice.
3. Enter one of the codes from the list. If the code was correct the mode key blinks twice. If not, the key emits one long blink. Then, you will have to repeat steps 2 and 3 until entering the correct code.
4. Press POWER. If the device has turned off, you have chosen the right code. If none of the codes work, try **Automatic Search**.

### Automatic Search

Automatic Search should only be undertaken if none of the brand codes works or your brand name is not listed. Use the **Automatic Search** option.

1. Switch on your device. Then press appropriate mode key, for example TV if you want to set up a TV.
2. Press and hold RCU SETUP until the mode key blinks twice.
3. Press 9 9 1. The mode key blinks twice.
4. Aim the remote at the device and press POWER.
5. Press CH + and CH- repeatedly until the device is switched off.
6. Press POWER to turn the TV on.
7. Next, press RCU SETUP to store the code for your device. The mode key blinks twice. Your remote control is now programmed to operate your TV set.
8. To search codes for other devices repeat steps 1 through 7, but substitute the TV key with the appropriate one for the mode you are searching for.

### Finding Your Code

If you want to know what code operates your device, you can obtain it with the **Device Code** option. To find out the code, follow these instructions:

1. Switch on your device. Then press appropriate mode key, for example TV if you want to set up a TV.
2. Press and hold the RCU SETUP until the mode key blinks twice.
3. Press 9 9 0. The mode key blinks twice.
4. For the first digit of your code, press 1 and count the number of times the key blinks (e.g. 2 blinks = 2). If the light does not blink, the digit is 0. For the second digit press 2 and count the number of blinks. Do the same for the remaining digits.
5. To check for other device codes, repeat the above steps, but substitute the TV key with the appropriate one for the device you are checking.

### Using Learning

Your remote control includes a learning feature. It means you can transfer some unique functions from the remote control of other device to this remote control.

1. Press RCU SETUP until the last selected mode key blinks twice. Then press 9 7 5.
2. Press the mode key. For example to transfer a function from DVD remote control press DVD.
3. Press the key on which the function will be stored.
4. Place your remote control and the device remote control (e.g. your DVD remote control) head-to-head, about 5 centimeters / 2 inches apart.
5. On the device remote, press and hold the key to be learned. The target remote control will blink rapidly and turn off. Keep holding the key on the device remote control until the device key on the target remote blinks twice.
6. If the learning failed, the device key emits one long blink. You will have to repeat step 5.

### **Deleting a Single Learning Key**

Once you have used a particular key to store a new function on it, you may restore the original function of the key.

1. Press RCU SETUP until the last selected mode key blinks twice. Then press 9 7 6.
2. Press the mode key (for example DVD). The mode key blinks twice.
3. Press the key containing the learned function. The mode key blinks twice.
4. Press and hold RCU SETUP to exit programming.

### **Deleting All Learned Keys**

1. Press RCU SETUP until the last selected mode key blinks twice. Then press 9 7 6.
2. Press the mode key twice (for example DVD). All the learned keys for this mode will be cleared. The mode key blinks twice.
3. Press and hold RCU SETUP to exit programming.

### **Using the Master Power Key**

Your remote has a feature that enables you to sequentially turn up to five devices on and off with a single key press. This functionality works only if the remote control is in STB mode.

1. Press RCU SETUP until the last selected mode key blinks twice.
2. Press 9 9 5. The last selected mode key will blink twice.
3. Press POWER.
4. Press the mode key for the device you would like to turn on first and press MASTER POWER. Then press the mode key for the second device to turn on and once again MASTER POWER. Repeat the steps until adding all the devices you want to be operated.
5. To save settings press STB.
6. Next press RCU SETUP to exit programming.

### **Volume Lock**

The remote control enables you to control the volume level of different devices without selecting the mode key for each device. For example: if you are watching a film on your DVD player, you can adjust the volume for your TV set, without pressing the TV mode key on your remote control.

To set the Volume Lock for your TV:

1. Press and hold RCU SETUP until the last selected mode key blinks twice.
2. Press 9 9 3. The last selected mode key will blink twice.
3. Then press TV and the device key blinks twice.

### **Deleting “Volume Lock” for a particular device (for example for DVD)**

1. Press DVD once.
2. Press and hold down the RCU SETUP key until the mode key blinks twice.
3. Press 9 9 3. The mode key blinks twice.
4. Press the VOL- key and the mode key will blink four times.

Now being in DVD mode, you will be able to control VOL+/- or MUTE functions of your DVD only (provided it was volume control).

### **Deleting “Volume Lock” for all devices**

1. Press and hold the RCU SETUP key until the last selected mode key blinks twice.
2. Press 9 9 3.
3. Press the VOL+ key and the last selected mode key will blink four times.

### **Clearing Custom Programming**

You may clear the custom programming and revert to the default settings of the remote control. To do that, follow these steps:

1. Press RCU SETUP until the last selected mode key blinks twice.
2. Enter 9 8 0. The last selected mode key blinks twice, pauses, and blinks twice again.

This procedure does not affect your setup codes. They remain in memory of the remote.

## Troubleshooting

<b>Problem</b>	<b>Solution</b>
Device key does not blink when you press a key.	Replace the batteries with two (2) new AA batteries.
Device key blinks when you press a key, but home entertainment device does not respond.	Make sure you are aiming the remote control at your home entertainment device and that you are within 4.5 meters / 15 feet of the device you are trying to control.
The remote control does not control home entertainment devices or commands are not performing properly.	Try all listed codes for the device brand being set up. Make sure all devices can be operated with an infrared remote control.
TV/VCR Combo does not respond properly.	Use the VCR codes for your brand. Some combo units may require both a TV code and a VCR code for full operation.
PLAY and STOP keys do not work on a Motorola DCT-2000 cable converter.	Re-program the STB key for cable code 0476.
Tried Search Method and still could not find a working code.	Try the Search Method again after clearing out the device key as follows: <ol style="list-style-type: none"> <li>Press and hold RCU SETUP until device key blinks twice.</li> <li>Enter 9 9 2.</li> <li>Press and release the device key to be cleared twice.</li> </ol>
Remote control does not turn on Sony or Sharp TV/VCR Combo.	For power on, these products require programming TV codes on the remote control. For Sony, use TV code 0000 and VCR code 0032. For Sharp, use TV code 0093 and VCR code 0048.

## Brand Codes

The following codes are used when configuring the remote control. First find the manufacturer of your equipment and then try the codes one by one.

### Audio Amplifiers

<b>Adcom</b>	0577, 1100	<b>Optimus</b>	0395, 0823
<b>Bose</b>	0674	<b>Parasound</b>	0246
<b>Duraband</b>	1561	<b>Philips</b>	0892
<b>Elan</b>	0647	<b>Pioneer</b>	0823
<b>GE</b>	0078	<b>Polk Audio</b>	0892
<b>Haman/Kardon</b>	0892	<b>RCA</b>	0823
<b>JVC</b>	0331	<b>Realistic</b>	0395
<b>Left Coast</b>	0892	<b>Sansui</b>	0321
<b>Lenoxx</b>	1561	<b>Shure</b>	0264
<b>Luxman</b>	0165	<b>Sony</b>	0689, 0815, 1126
<b>Marantz</b>	0892, 0321	<b>Soundesign</b>	0078, 0211
<b>McIntosh</b>	0251	<b>Victor</b>	0331
<b>Nakamichi</b>	0321	<b>Wards</b>	0078, 0211
<b>NEC</b>	0264	<b>Yamaha</b>	0354, 0133

### Audio Accessories

<b>Accurian</b>	1106	<b>Motorola</b>	1464
<b>Altec Lansing</b>	0607, 1056, 1485	<b>NaviPod</b>	1644
<b>Apple</b>	1115, 1644	<b>Netgear</b>	1785
<b>Cambridge Soundworks</b>	1530	<b>Omnifi</b>	1605
<b>Creative</b>	0872	<b>Onkyo</b>	1789
<b>D-Link</b>	1522	<b>Roku</b>	1828
<b>DLO</b>	1155	<b>Sonance</b>	1917
<b>Integra</b>	1789	<b>SSI</b>	1522
<b>iPort</b>	1917	<b>Yamaha</b>	1809, 1810
<b>Marantz</b>	1491		

## Audio Receivers

<b>ADC</b>	0531	<b>Magnavox</b>	1189, 1269, 0189, 0391, 0531, 1514
<b>Aiwa</b>	1405, 0189, 0121, 0405, 1243, 1388, 1641	<b>Marantz</b>	1189, 1269, 0189, 1289
<b>Akai</b>	1512	<b>Mitsubishi</b>	1393
<b>Alco</b>	1390	<b>Norcent</b>	1389
<b>Amphion Media Works</b>	1563, 1615	<b>Nova</b>	1389
<b>AMW</b>	1563, 1615	<b>Onkyo</b>	0135, 0842, 1298, 1320, 1531
<b>Anam</b>	1609, 1074	<b>Optimus</b>	1023, 0080, 0186, 0531, 0670, 1074
<b>Apex Digital</b>	1257, 1430, 1774	<b>Oritron</b>	1366, 1497
<b>Arcam</b>	1120	<b>Panasonic</b>	1308, 1518, 0309, 0367, 1288, 1316, 1548, 1633, 1763, 1764
<b>Audiotronic</b>	1189	<b>Philips</b>	1189, 1269, 0189, 0391, 1120, 1266
<b>Audiovox</b>	1390, 1627	<b>Pioneer</b>	1023, 0014, 0080, 0150, 0244, 0531, 0630, 1384
<b>B &amp; K</b>	0701, 0820, 0840	<b>Polaroid</b>	1508
<b>BK</b>	0702	<b>Polk Audio</b>	0189, 1289, 1414
<b>Bose</b>	1229, 1629, 1841, 1933	<b>Proscan</b>	1254
<b>Cambridge Soundworks</b>	1370	<b>RCA</b>	1023, 1609, 1254, 0080, 0531, 1074, 1390, 1511
<b>Capetronic</b>	0513	<b>Rio</b>	1869
<b>Carver</b>	1189, 0189	<b>Samsung</b>	1295, 1500
<b>Classic</b>	1352	<b>Sansui</b>	0189
<b>Coby</b>	1389	<b>Sanyo</b>	1251, 1469, 1801
<b>Curtis Mathes</b>	0080	<b>Sharp</b>	0186, 1286
<b>Daewoo</b>	1250	<b>Sharper Image</b>	1556
<b>Delphi</b>	1414	<b>Sherwood</b>	1077, 1517, 1653
<b>Denon</b>	1360, 0004, 1142	<b>Sirius</b>	1627, 1811, 1987
<b>Fisher</b>	1801	<b>Sonic Blue</b>	1532, 1869
<b>Gateway</b>	1517	<b>Sony</b>	1058, 1441, 1258, 1759, 1622, 0474, 1349, 1406, 1442, 1558, 1658, 1758, 1858
<b>Go Video</b>	1532	<b>Soundesign</b>	0670
<b>Harman/Kardon</b>	0110, 0189, 0891, 1304, 1306	<b>Stereophonics</b>	1023
<b>Hitachi</b>	1801	<b>Sunfire</b>	1313
<b>Integra</b>	0135, 1298, 1320	<b>Teac</b>	1074, 1390, 1528
<b>JBL</b>	0110, 1306	<b>Technics</b>	1308, 1518, 0309
<b>JVC</b>	1374, 1495, 1811, 1871	<b>Thorens</b>	1189
<b>Kenwood</b>	1313, 1570, 1569, 0186	<b>Toshiba</b>	1788
<b>KLH</b>	1390, 1412, 1428	<b>Venturer</b>	1390
<b>Koss</b>	1366, 1497	<b>Wards</b>	0189, 0014, 0080
<b>Lasonic</b>	1798	<b>XM</b>	1406, 1414
<b>LG</b>	1293	<b>Yamaha</b>	0176, 0186, 1176, 1276, 1331, 1375
<b>Linn</b>	0189	<b>Zenith</b>	0857, 1293
<b>Liquid Video</b>	1497		

## Cable/DVR/PVR Combos

<b>Americast</b>	0899	<b>Pioneer</b>	1877, 0877
<b>Amino</b>	1822	<b>RCA</b>	1256
<b>Digeo</b>	1187	<b>Sasktel</b>	1737
<b>General Instrument</b>	0476, 0810	<b>Samsung</b>	1376, 1877
<b>Jerrold</b>	0476, 0810	<b>Scientific Atlanta</b>	1877, 0877
<b>Motorola</b>	1376, 0810, 1187, 1106, 1540, 0476	<b>Sony</b>	1006
<b>Myrio</b>	1822	<b>Supercable</b>	0276
<b>Pace</b>	1376, 1877, 0237	<b>Thomson</b>	1256
<b>Panasonic</b>	1376, 1877	<b>Zenith</b>	0899

## Cable Boxes/ Converters

<b>ABC</b>	0003, 0008, 0014, 0017	<b>Pioneer</b>	1877, 0877, 0144, 0533
<b>Americast</b>	0899	<b>Pulsar</b>	0000
<b>Amino</b>	1602, 1822	<b>Quasar</b>	0000
<b>Bell &amp; Howell</b>	0014	<b>RadioShack</b>	0883
<b>Bell South</b>	0899	<b>RCA</b>	1256
<b>Clearmaster</b>	0883	<b>Regal</b>	0279, 0273
<b>ClearMax</b>	0883	<b>Runco</b>	0000
<b>Coolmax</b>	0883	<b>Samsung</b>	1376, 1877, 0144
<b>Digeo</b>	1187	<b>Sasktel</b>	1737
<b>Digi</b>	0637	<b>Scientific Alaska</b>	1877, 0877, 0477, 0008, 0017
<b>Director</b>	0476	<b>Sejin</b>	1602
<b>Dumont</b>	0637	<b>Sony</b>	1006
<b>General Instrument</b>	0476, 0810, 0276, 0003	<b>Starcom</b>	0003
<b>Goldstar</b>	0144	<b>Supercable</b>	0276
<b>Hamlin</b>	0009, 0273	<b>Supermax</b>	0883
<b>i3 Micro</b>	1602	<b>Thomson</b>	1256
<b>Jerrold</b>	0476, 0810, 0276, 0003, 0012, 0014	<b>Tocom</b>	0012
<b>Memorex</b>	0000	<b>Torx</b>	0003
<b>Motorola</b>	1376, 0476, 0810, 0276, 1187, 1254, 1106, 1540	<b>Toshiba</b>	0000
<b>Multitech</b>	0883	<b>Tristar</b>	0883
<b>Myrio</b>	1602, 1822	<b>V2</b>	0883
<b>Pace</b>	1376, 1877, 0237, 0008	<b>Viewmasster</b>	0883
<b>Panasonic</b>	1376, 1877, 0000, 0107	<b>Vision</b>	0883
<b>Panther</b>	0637	<b>Vortex View</b>	0883
<b>Paragon</b>	0000	<b>Zenith</b>	0000, 0525, 0899
<b>Philips</b>	1305, 0317		

## DVD Recorders

<b>Accurian</b>	1416	<b>Magnavox</b>	0646, 0675, 1506
<b>Apex Digital</b>	1056	<b>Panasonic</b>	0490
<b>Aspire Digital</b>	1168	<b>Philips</b>	0646
<b>Coby</b>	1086	<b>Pioneer</b>	0631
<b>CyberHome</b>	1129, 1502	<b>Polaroid</b>	1086
<b>Funai</b>	0675, 1334	<b>RCA</b>	0522
<b>Gateway</b>	1073, 1158	<b>Samsung</b>	0490
<b>Go Video</b>	0741, 1158, 1304, 1730	<b>Sensory Science</b>	1158
<b>iLo</b>	1348	<b>Sharp</b>	0675
<b>JVC</b>	1164, 1275	<b>Sony</b>	1033, 1431, 1432, 1433
<b>Kreisen</b>	1421	<b>Sylvania</b>	0675
<b>LG</b>	0741	<b>Zenith</b>	0741
<b>LiteOn</b>	1158, 1416, 1440		

## DVD Combos

<b>Akai</b>	0695	<b>LG</b>	1526
<b>Audiovox</b>	1071, 1121, 1122	<b>Mintek</b>	1472
<b>iLo</b>	1472	<b>RCA</b>	1193
<b>Initial</b>	1472		

## DVR/PVR Systems

<b>Amino</b>	1615	<b>Motorola</b>	0869
<b>DirecTV</b>	1377, 0392, 0639, 1142, 1076, 0099, 1392, 1442, 1443, 1444, 1640	<b>Philips</b>	1142, 1442, 0739
<b>Dish Network Sys</b>	1505, 0775	<b>Proscan</b>	0392
<b>Dishpro</b>	1505, 0775	<b>RCA</b>	1392
<b>Echostar</b>	1505, 0775, 1170	<b>Samsung</b>	1442, 0739
<b>Expressvu</b>	0775	<b>Sony</b>	0639, 1640
<b>Hughs Network Sys</b>	1142, 1442, 1443, 1444, 0739	<b>Star Choice</b>	0869
<b>JVC</b>	1170		

## DVD Players

<b>Accurian</b>	1072, 1416	<b>Greenhill</b>	0717	<b>Portland</b>	0770
<b>Adcom</b>	1094	<b>Harman/Kardon</b>	0582, 0702	<b>Presidian</b>	0675, 1072
<b>Advent</b>	1016	<b>Hitachi</b>	0573, 0664, 1247, 1919	<b>Prima</b>	1016
<b>Aiwa</b>	0641	<b>Hiteker</b>	0672	<b>Primare</b>	1467
<b>Akai</b>	0695, 0770 0899, 1089	<b>iLo</b>	1348, 1472	<b>Princeton</b>	0674
<b>Alco</b>	0790	<b>Initial</b>	0717, 1472	<b>Proscan</b>	0522
<b>Allegro</b>	0869	<b>Innovative Tech</b>	1542	<b>Pro Vision</b>	0778
<b>Amphion Media</b>	0872, 1245	<b>Insignia</b>	1268	<b>Qwestar</b>	0651
<b>AMW</b>	0872, 1245	<b>Integra</b>	0627	<b>RCA</b>	0522, 0571, 0717, 0790, 0822, 1022, 1132, 1193
<b>Apex Digital</b>	0672, 0717, 0755, 0794, 0796, 0797, 0830, 1004, 1020, 1056, 1061, 1100	<b>Jaton</b>	1078	<b>Rio</b>	0869
<b>Arrgo</b>	1023	<b>JBL</b>	0702	<b>RJTech</b>	1360
<b>Aspire Digital</b>	1168, 1407	<b>Jensen</b>	1016	<b>Rotel</b>	0623, 1178
<b>Audiologic</b>	0736	<b>JSI</b>	1423	<b>Rowa</b>	0823
<b>Audiovox</b>	0790, 1041, 1071, 1072, 1121, 1122	<b>JVC</b>	0558, 0623, 0867, 1164, 1275, 1602, 1863	<b>Sampo</b>	0698, 0752, 1501
<b>Axion</b>	1071, 1072	<b>jWin</b>	1049, 1051	<b>Samsung</b>	0490, 0573, 0820, 0899, 1044, 1075
<b>B &amp; K</b>	0655, 0662	<b>Kawasaki</b>	0790	<b>Sansui</b>	0695
<b>BBK</b>	1224	<b>Kenwood</b>	0490, 0534, 0682, 0737	<b>Sanyo</b>	0670, 0695, 0873, 1919
<b>Bel Canto Design</b>	1571	<b>KLH</b>	0717, 0790, 1020, 1149, 1216	<b>Sensory Sci.</b>	1158
<b>Blaupunkt</b>	0717	<b>Konka</b>	0711, 0719, 0720, 0721	<b>Sharp</b>	0630, 0675, 0752, 1256
<b>Blue Parade</b>	0571	<b>Koss</b>	0651, 0896, 1423	<b>Sharper Img</b>	1117
<b>Broksonic</b>	0695, 0868, 1419	<b>Kreisen</b>	1421	<b>Sherwood</b>	0633, 0770, 1043, 1077, 1889
<b>Buffalo</b>	1882	<b>Landel</b>	0826	<b>Shinsonic</b>	0533, 0839
<b>Cary Audio Des.</b>	1477	<b>Lasonic</b>	0798, 1173	<b>Sigma Des.</b>	0674
<b>CAVS</b>	1057	<b>Lenoxx</b>	1127	<b>Sonic Blue</b>	0869, 1099
<b>Centrios</b>	1577	<b>LG</b>	0591, 0741, 0801, 0869, 1526	<b>Sony</b>	0533, 1533, 0864, 1033, 1431, 1432, 1433, 1548, 1892
<b>Cinea</b>	0831	<b>LiteOn</b>	1058, 1158, 1416, 1440	<b>Sound Mob</b>	1298
<b>Cinego</b>	1399	<b>Loewe</b>	0511	<b>Sova</b>	1122
<b>CineVision</b>	0876, 0833, 0869	<b>Magnavox</b>	0503, 0539, 0646, 0675, 0821, 1268, 1506	<b>Sungale</b>	1074, 1532
<b>Citizen</b>	1277	<b>Malata</b>	0782, 1159	<b>Superscan</b>	0821
<b>Coby</b>	0778, 0852, 1086, 1107, 1165, 1177, 1351	<b>Marantz</b>	0539	<b>SVA</b>	0860, 1105
<b>Craig</b>	0831	<b>McIntosh</b>	1273	<b>Sylvania</b>	0675, 0821, 1268
<b>Curtis Mathes</b>	1087	<b>Memorex</b>	0695, 0831, 1270	<b>Symphonic</b>	0675, 0821
<b>CyberHome</b>	0816, 0874, 1023, 1024, 1117, 1129, 1502, 1537	<b>Microsoft</b>	0522, 1708	<b>TAG McLaren</b>	0894
<b>D-Link</b>	1881	<b>Mintek</b>	0839, 0717, 1472	<b>Teac</b>	0790, 0809
<b>Daewoo</b>	0784, 0705, 0833, 0869, 1169, 1172, 1234, 1242, 1441, 1443	<b>Mitsubishi</b>	1521, 0521	<b>Technics</b>	0490, 0703
<b>Denon</b>	0490, 0634	<b>Momitsu</b>	1082	<b>Tecnosonic</b>	0730
<b>Desay</b>	1407, 1455	<b>NAD</b>	0741	<b>Techwood</b>	0692
<b>Diamond Vision</b>	1316, 1609, 1610	<b>Nakamichi</b>	1222	<b>Terapin</b>	1031
<b>Disney</b>	0675, 1270	<b>NEC</b>	0785	<b>Theta Digi.</b>	0571
<b>Dual</b>	1068, 1085	<b>Nesa</b>	0717, 1603	<b>Toshiba</b>	0503, 0695, 1045, 1154, 1854
<b>Durabrand</b>	1127	<b>NeuNeo</b>	1454	<b>Tredex</b>	0799, 0800, 0803, 0804
<b>DVD2000</b>	0521	<b>Next Base</b>	0826	<b>Urban Con.</b>	0503
<b>Emerson</b>	0591, 0675, 0821, 1268	<b>NexxTech</b>	1402	<b>US Logic</b>	0839
<b>Enterprise</b>	0591	<b>Norcent</b>	1003, 0872, 1107, 1265, 1457	<b>Valor</b>	1298
<b>ESA</b>	0821, 1268, 1443	<b>Onkyo</b>	0503, 0627, 0792	<b>Venturer</b>	0790
<b>Fisher</b>	0670, 1919	<b>Oppo</b>	1224, 1525	<b>Vialta</b>	1509
<b>Funai</b>	0675, 1268, 1334	<b>OptoMedia Elec.</b>	0896	<b>Vizo</b>	1064, 1226
<b>Gateway</b>	1073, 1077, 1158	<b>Oritron</b>	0651	<b>Vocopro</b>	1027, 1360
<b>GE</b>	0522, 0815, 0717	<b>Panasonic</b>	0490, 0632, 0703, 1362, 1462, 1490, 1762	<b>Xbox</b>	0522, 1708
<b>Go Video</b>	0744, 0715, 0741, 0783, 0833, 0869, 1044, 1075, 1099, 1144, 1158, 1304, 1443, 1730	<b>Philips</b>	0503, 0539, 0646, 0675, 0854, 1260, 1267, 1354	<b>Xwave</b>	1001
<b>Go Vision</b>	1071, 1072	<b>Pioneer</b>	0525, 0571, 0631, 0632	<b>Yamaha</b>	0490, 0539, 0545
<b>Goldstar</b>	0741	<b>Polaroid</b>	1020, 1061, 1086, 1245, 1316, 1478, 1480, 1482	<b>Zenith</b>	0503, 0591, 0741, 0869
<b>GPX</b>	0699, 0769	<b>Polk Audio</b>	0539	<b>Zoece</b>	1265

## Satellite Receivers

<b>AlphaStar</b>	0772	<b>NEC</b>	1270
<b>Amino</b>	1615	<b>Next Level</b>	0869
<b>Chaparral</b>	0216	<b>Panasonic</b>	0247, 0701
<b>Coolsat</b>	1806	<b>Pansat</b>	1801
<b>Crossdigital</b>	1109	<b>Paysat</b>	0724
<b>DirectTV</b>	1377, 0392, 0566, 0639, 1639, 1142, 0247, 0749, 1749, 0724, 0819, 1856, 1076, 1108, 0099, 1109, 1392, 1414, 1442, 1443, 1444, 1609, 1640	<b>Philips</b>	1142, 0749, 1749, 0724, 1076, 0722, 0099, 1442
<b>Dish Network System</b>	1505, 1005, 0775, 1170 1775	<b>Proscan</b>	0392, 0566
<b>Dishpro</b>	1505, 1005, 0775, 1775	<b>Proton</b>	1535
<b>Echostar</b>	1505, 1005, 0775, 1170, 1775	<b>RadioShack</b>	0869
<b>Expressvu</b>	0775, 1775	<b>RCA</b>	0566, 0855, 0143, 1392
<b>GE</b>	0566	<b>Samsung</b>	1377, 1276, 1108, 1109, 1442, 1609
<b>General Instrument</b>	0869	<b>Sanyo</b>	1219
<b>GOI</b>	0775, 1775	<b>SKY</b>	0856
<b>Goodmans</b>	1246	<b>Sony</b>	0639, 1639, 1640
<b>Hisense</b>	1535	<b>Star Choice</b>	0869
<b>Hitachi</b>	0819, 1250	<b>Tivo</b>	1142, 1442, 1443, 1444
<b>HTS</b>	0775, 1775	<b>Toshiba</b>	0749, 1749, 0790, 1285
<b>Hughes Network Sys</b>	1142, 0749, 1749, 1442, 1443, 1444	<b>UltimateTV</b>	1392, 1640
<b>Humax</b>	1790	<b>Ultrasat</b>	1806
<b>iLo</b>	1535	<b>Uniden</b>	0724, 0722
<b>JVC</b>	0775, 1170, 1775	<b>US Digital</b>	1535
<b>LG</b>	1226, 1414	<b>USDTV</b>	1535
<b>Magnavox</b>	0724, 0722	<b>Voom</b>	0869
<b>Memorex</b>	0724	<b>Zenith</b>	1856, 0856
<b>Mitsubishi</b>	0749		
<b>Motorola</b>	0869		

## TV/DVD Combos Controlled by the TV

<b>Accurian</b>	1803	<b>ESA</b>	1963	<b>Mintek</b>	1990
<b>Advent</b>	1933	<b>Funai</b>	1963	<b>Panasonic</b>	1941
<b>Akai</b>	1935	<b>Hitachi</b>	1960	<b>Polaroid</b>	1991
<b>Apex Digital</b>	1943	<b>iLo</b>	1990	<b>Prima</b>	1933
<b>Audiovox</b>	1937, 1951, 1952	<b>Initial</b>	1990	<b>RCA</b>	1948, 1958, 2002
<b>Axion</b>	1937	<b>Insignia</b>	1963, 2002	<b>Samsung</b>	1903
<b>Broksonic</b>	1935	<b>Jensen</b>	1933	<b>Sansui</b>	1935
<b>Cinego</b>	1986	<b>KLH</b>	1962	<b>Sova</b>	1952
<b>Diamond Vision</b>	1997	<b>LG</b>	1993	<b>Sylvania</b>	1963
<b>Emerson</b>	1963	<b>Magnavox</b>	1963	<b>Toshiba</b>	1635, 1935

## TV/VCR Combos Controlled by the DVD

<b>Advent</b>	1016	<b>Jensen</b>	1016
<b>Akai</b>	0695	<b>KLH</b>	1261
<b>Apex Digital</b>	0830	<b>Konka</b>	0719, 0720
<b>Audiovox</b>	1071, 1121, 1122	<b>LG</b>	1526
<b>Axion</b>	1071	<b>Magnavox</b>	1268
<b>Broksonic</b>	0695	<b>Mintek</b>	1472
<b>Cinego</b>	1399	<b>Panasonic</b>	1490
<b>Diamond Vision</b>	1610	<b>Philips</b>	0854, 1260
<b>Emerson</b>	0675, 1268	<b>Polaroid</b>	1480
<b>ESA</b>	1268	<b>Prima</b>	1016
<b>Funai</b>	1268	<b>RCA</b>	1022, 1193
<b>Go Vision</b>	1071	<b>Samsung</b>	0899
<b>Hitachi</b>	1247	<b>Sansui</b>	0695
<b>iLo</b>	1472	<b>Sova</b>	1122
<b>Initial</b>	1472	<b>Sylvania</b>	0675, 1268
<b>Insignia</b>	1268	<b>Toshiba</b>	0695

## TV's (HDTV)

<b>Advent</b>	0842
<b>Hitachi</b>	1960
<b>Marantz</b>	0854
<b>Mitsubishi</b>	0150
<b>Panasonic</b>	0250, 0650, 1291
<b>Pioneer</b>	0679
<b>Princeton</b>	0717
<b>RCA</b>	1448
<b>Samsung</b>	0812, 0702
<b>Sharp</b>	0688, 0689
<b>Toshiba</b>	1256

## TVs

<b>A-Mark</b>	0003	<b>CyberHome</b>	0794
<b>Abex</b>	0032	<b>Cytron</b>	1326
<b>Accurian</b>	1803	<b>Daewoo</b>	0451, 0092, 1661, 0019, 0039, 0066, 0067, 0091, 0623, 0661, 0672
<b>Action</b>	0873	<b>Daytron</b>	0019
<b>Admira</b>	0093, 0463	<b>Dell</b>	1080, 1178, 1264, 1403
<b>Advent</b>	0761, 0783, 0815, 0817, 0842, 1933	<b>Denon</b>	0145, 0511
<b>Adventura</b>	0046	<b>Denstar</b>	0628
<b>Aiko</b>	0092	<b>Diamond Vision</b>	1996, 1997
<b>Aiwa</b>	0701	<b>Dumont</b>	0017, 0019
<b>Akai</b>	0812, 0702, 0030, 0098, 0672, 1207, 1903, 1935	<b>Durabrand</b>	0463, 0180, 0178, 0171, 1034, 0003
<b>Alaron</b>	0179, 0183, 0216	<b>Dwin</b>	0720, 0774
<b>Albatron</b>	0700, 0843	<b>Dynatech</b>	0049
<b>Ambassador</b>	0177	<b>Electroband</b>	0000, 0185
<b>America Action</b>	0180	<b>Electrograph</b>	1623, 1755
<b>Ampro</b>	0751	<b>Electrohome</b>	0381, 0389, 0409
<b>Anam</b>	0180, 0004, 0009, 0068	<b>Emerson</b>	0154, 0236, 0463, 0180, 0178, 0171, 1963, 1944, 0623, 0282, 0280, 0270, 0185, 0183, 0182, 0181, 0179, 0177, 0158, 0039, 0038, 0019
<b>Anam National</b>	0055, 0161	<b>Emprex</b>	1422, 1546
<b>AOC</b>	0030, 0003, 0019, 0052, 0137, 0185, 1365	<b>Envision</b>	0030, 0813, 1365
<b>Apex Digital</b>	0748, 0879, 0765, 0767, 0890, 1217, 1943	<b>Epson</b>	0833, 0840, 1290
<b>Archer</b>	0003	<b>ESA</b>	0812, 0171, 1944, 1963
<b>Astar</b>	1548	<b>Fisher</b>	0154, 0159
<b>Audiovox</b>	0451, 0180, 0092, 0003, 0623, 0710, 0802, 0846, 0875, 1284, 1937, 1951, 1952	<b>FlexVision</b>	0710
<b>Aventura</b>	0171	<b>Fujitsu</b>	0179, 0186, 0683, 0809, 0853
<b>Axion</b>	1937	<b>Funai</b>	0180, 0171, 0179, 1271, 1963
<b>Belcor</b>	0019	<b>Futuretech</b>	0180
<b>Bell&amp; Howell</b>	0154, 0016	<b>Gateway</b>	1001, 1002, 1003, 1004, 1755, 1756
<b>BenQ</b>	1032, 1315	<b>GE</b>	1447, 0047, 0051, 0451, 0178, 1347, 0747, 0282, 0279, 0251, 0174, 0138, 0135, 0055, 0029, 0027, 0021
<b>Bradford</b>	0180	<b>Gibraltar</b>	0017, 0030, 0019
<b>Brockwood</b>	0019	<b>Go Video</b>	0886
<b>Broksonic</b>	0236, 0463, 0003, 1935, 1938	<b>GoldStar</b>	0178, 0030, 0001, 0002, 0019, 0032, 0106, 0409
<b>Byd:sign</b>	1309, 1311	<b>Goodmans</b>	0360
<b>Cadia</b>	1283	<b>Gradiente</b>	0392
<b>Candle</b>	0030, 0046, 0056, 0186	<b>Grunpy</b>	0180, 0179
<b>Carnivale</b>	0030	<b>Haier</b>	1034, 0768
<b>Carver</b>	0054, 0170	<b>Hallmark</b>	0178
<b>CCE</b>	0217, 0329	<b>Hannspree</b>	1348, 1351, 1352
<b>Celebrity</b>	0000	<b>Hantarex</b>	1338
<b>Celera</b>	0765	<b>Harley Davidson</b>	0043, 0179
<b>Champion</b>	1362	<b>Harman/ Kardon</b>	0054, 0078
<b>Campion</b>	1362	<b>Harvard</b>	0180, 0068
<b>Changhong</b>	0765	<b>Havermy</b>	0093
<b>Cinego</b>	1986	<b>Helios</b>	0865
<b>Citizen</b>	0060, 0030, 0092, 0039, 0046, 0056, 0186, 0280	<b>Hello Kitty</b>	0451
<b>Clairtone</b>	0185	<b>Hewlett Packard</b>	1088, 1089, 1101, 1494, 1502
<b>Clarion</b>	0180	<b>Hisense</b>	0748
<b>Commercial Sol.</b>	1447, 0047	<b>Hitachi</b>	1145, 0145, 0016, 0032, 0038, 0056, 0095, 0097, 0151, 0173, 0227, 0279, 0409, 0413, 0797, 1960
<b>Concerto</b>	0056	<b>HP</b>	1088, 1089, 1101, 1494, 1502
<b>Contec</b>	0180, 0157, 0158, 0185	<b>Hyundai</b>	0849, 1219, 1294
<b>Craig</b>	0180, 0161	<b>iLo</b>	1286, 1603, 1990
<b>Crosley</b>	0054	<b>Infinity</b>	0054
<b>Crown</b>	0180, 0039	<b>Initial</b>	1603, 1990
<b>Curtis Mathes</b>	0047, 0054, 0154, 0451, 0093, 0060, 0702, 0030, 0145, 0166, 1347, 1147, 0747, 0466, 0056, 0039, 0016	<b>Insignia</b>	0171, 1204, 1326, 1517, 1963, 2002
<b>Citizen</b>	0060, 0030, 0092, 0039, 0046, 0056, 0186, 0280	<b>Inteq</b>	0017
<b>Clairtone</b>	0185	<b>Janeil</b>	0046
<b>Clarion</b>	0180	<b>JBL</b>	0054
<b>Commercial Sol.</b>	1447, 0047	<b>JCB</b>	0000
<b>CXC</b>	0180	<b>Jensen</b>	0761, 0050, 0815, 0817, 1299, 1933



<b>JVC</b>	0053, 0036, 0069, 0160, 0169, 0182, 0731, 1253	<b>Optomoa</b>	0887
<b>Kamp</b>	0216	<b>Optonica</b>	0093, 0165
<b>Kawasho</b>	0158, 0216, 0308	<b>Orion</b>	0236, 0463, 1463, 0179
<b>Kaypani</b>	0052	<b>Panasonic</b>	0250, 0051, 0055, 0162, 0226, 0338, 0375, 0650, 1291, 1410, 1941, 1946, 1947
<b>KEC</b>	0180	<b>Penney</b>	0047, 0156, 0051, 0060, 0178, 0030, 1347, 0747, 0309, 0149, 0138, 0135, 0110, 0039, 0032, 0027, 0021, 0019, 0018, 0003, 0002
<b>Kenwood</b>	0030, 0019	<b>Petters</b>	1523
<b>KLH</b>	0765, 0767, 1962	<b>Philco</b>	0054, 0030, 0019, 0020, 0028, 0096, 0302
<b>Kloss</b>	0024, 0046, 0078	<b>Philips</b>	1454, 0054, 0690, 1154, 1483
<b>KMC</b>	0106	<b>Pilot</b>	0030, 0019, 0039
<b>Konka</b>	0628, 0632, 0638, 0703, 0707	<b>Pioneer</b>	0166, 0038, 0172, 0679, 0866, 1260, 1398
<b>Kost</b>	1262, 1483	<b>Polaroid</b>	0765, 0865, 1262, 1276, 1314, 1316, 1326, 1327, 1328, 1341, 1498, 1523, 1991, 1992
<b>KTV</b>	0180, 0030, 0039, 0183, 0185, 0217, 0280	<b>Portland</b>	0092, 0019, 0039
<b>LG</b>	1265, 0178, 0442, 0700, 0829, 0856, 1178, 1325, 1423, 1758, 1993	<b>Prima</b>	0761, 0783, 0815, 0817, 1933
<b>Loewe</b>	0136	<b>Princeton</b>	0700, 0717
<b>Logik</b>	0016	<b>Prism</b>	0051
<b>Luxman</b>	0056	<b>Proscan</b>	1447, 0047, 0747, 1347
<b>LXI</b>	0047, 0054, 0154, 0156, 0178, 0148, 0747	<b>Proton</b>	0178, 0003, 0031, 0052, 0466
<b>Magnavox</b>	1454, 0054, 0030, 0706, 1963, 1944, 1525, 1254, 1198, 0802, 0386, 0230, 0187, 0186, 0179, 0096, 0036, 0028, 0024, 0020	<b>Protron</b>	1320, 1323
<b>Majestic</b>	0015, 0016	<b>Proview</b>	0835, 1401, 1498
<b>Marantz</b>	0054, 0030, 0444, 0704, 0854, 0855, 1154, 1398	<b>Pulsar</b>	0017, 0019
<b>Matsushita</b>	0250, 0650	<b>Quasar</b>	0250, 0051, 0055, 0165, 0219, 0650
<b>Maxent</b>	0762, 1211, 1755	<b>RadioShack</b>	1447, 0047, 2002, 1958, 1953, 1948, 1547, 1347, 1247, 1147, 1047, 0747, 0679, 0278, 0147, 0135, 0747, 0090, 0038, 0029, 0019, 0018
<b>Megapower</b>	0700	<b>RCA</b>	1447, 0047, 2002, 1958, 1953, 1948, 1547, 1347, 1247, 1147, 1047, 0747, 0679, 0278, 0174, 0135, 0090, 0038, 0029, 0019, 0018
<b>Megatron</b>	0178, 0145, 0003	<b>Realistic</b>	0154, 0180, 0178, 0030, 0019, 0032, 0039, 0056, 0165
<b>MEI</b>	0185	<b>Rhapsody</b>	0183, 0185, 0216
<b>Memorex</b>	0154, 0463, 0150, 0178, 0016, 0106, 0179	<b>Runco</b>	0017, 0030, 0251, 0497, 0603, 1398
<b>MGA</b>	0150, 0178, 0030, 0019, 0155	<b>Sampo</b>	0030, 0032, 0039, 0052, 0100, 0110, 0762, 1755
<b>Midland</b>	0047, 0017, 0051, 0032, 0039, 0135, 0747	<b>Samsung</b>	0060, 0812, 0702, 0178, 0030, 1903, 1575, 1395, 1312, 1060, 0814, 0766, 0427, 0408, 0329, 0056, 0032, 0019
<b>Mintek</b>	1603, 1990	<b>Samsux</b>	0039
<b>Minutz</b>	0021	<b>Sansui</b>	0463, 1409, 1935
<b>Mitsubishi</b>	0093, 1250, 0150, 0178, 0014, 0019, 0098, 0155, 0331, 0358, 0836, 0868, 1550	<b>Sanyo</b>	0154, 0088, 0107, 0146, 0159, 0232, 0484, 0799, 0893, 1142
<b>Monivision</b>	0700, 0843	<b>Sceptre</b>	0878, 1217, 1360, 1599
<b>Motorola</b>	0093, 0055, 0835	<b>Scimitsu</b>	0019
<b>Moxell</b>	0835	<b>Scotch</b>	0178
<b>MTC</b>	0060, 0030, 0019, 0049, 0056, 0091, 0185, 0216	<b>Scott</b>	0236, 0180, 0178, 0019, 0179, 0309
<b>Multitech</b>	0180, 0049, 0217	<b>Sears</b>	0047, 0054, 0154, 0156, 0178, 0171, 0015, 0056, 0146, 0148, 0149, 0159, 0168, 0179, 0281, 0747
<b>NAD</b>	0156, 0178, 0866	<b>Sharp</b>	0093, 0039, 0153, 0157, 0165, 0220, 0281, 0386, 0398, 0491, 0688, 0689, 0818, 0851, 1602
<b>NEC</b>	0030, 0019, 0036, 0056, 0170, 0434, 0497, 0882, 1398, 1704	<b>Sheng Chia</b>	0093
<b>Neovia</b>	1338	<b>Sherwood</b>	1399
<b>NetTV</b>	0762, 1755	<b>Shogun</b>	0019
<b>Nikko</b>	0178, 0030, 0092, 0317	<b>Signature</b>	0016
<b>Noblex</b>	0430	<b>Signet</b>	1262
<b>Norcent</b>	0748, 0824, 1089, 1365, 1589, 1590, 1591	<b>SIM2 Multimedia</b>	1297
<b>Norwood Micro</b>	1286, 1296, 1303	<b>Simpson</b>	0186, 0187
<b>Noshi</b>	0018	<b>Sony</b>	1100, 0000, 0011, 0080, 0111, 0273, 0353, 0810, 0834, 1317
<b>NTC</b>	0092	<b>Soundesign</b>	0180, 0178, 0179, 0186
<b>Olevia</b>	1144, 1240, 1331, 1610	<b>Sova</b>	1320, 1952
<b>Olympus</b>	1342	<b>Soyo</b>	1520
<b>Onwa</b>	0180	<b>Spectricon</b>	0003, 0137
<b>Optimus</b>	0154, 0250, 0166, 0650	<b>Soyo</b>	1520

<b>Spectricon</b>	0003, 0137	<b>Tosonic</b>	0185
<b>Squareview</b>	0171	<b>Totevision</b>	0039
<b>SSS</b>	0180, 0019	<b>Trical</b>	0157
<b>Starlite</b>	0180	<b>TVS</b>	0463
<b>Studio Experience</b>	0843	<b>Ultra</b>	0391, 1323
<b>Superscan</b>	0093, 0864	<b>Universal</b>	0027
<b>Supre-Macy</b>	0046	<b>Universum</b>	1337
<b>Supreme</b>	0000	<b>US Logic</b>	1286, 1303
<b>SVA</b>	0748, 0587, 0768, 0865, 0870, 0871, 0872	<b>Vector Research</b>	0030
<b>Sylvania</b>	0054, 0030, 0171, 0020, 0028, 0065, 0096, 0381, 1271, 1944, 1963	<b>Victor</b>	0053
<b>Symphonic</b>	0180, 0171, 1944	<b>Video Concepts</b>	0098
<b>Syntax</b>	1144, 1240, 1331	<b>Vidikron</b>	0054, 0242, 1398
<b>Tandy</b>	0093	<b>Vidtech</b>	0178, 0019, 0036
<b>Tatung</b>	0003, 0049, 0055, 0396, 1101, 1285, 1286, 1287, 1288, 1361, 1756	<b>Viewsonic</b>	0797, 0857, 0864, 0885, 1330, 1342, 1578, 1627, 1755
<b>Technics</b>	0250, 0051	<b>Viking</b>	0046, 0312
<b>Technol Ace</b>	0179	<b>Viore</b>	1207
<b>Technovox</b>	0007	<b>Visart</b>	1336
<b>Techview</b>	0847	<b>Vizio</b>	0864, 0885, 1499, 1756, 1758
<b>Techwood</b>	0051, 0003, 0056	<b>Wards</b>	0054, 0178, 0030, 1156, 0866, 0202, 0179, 0174, 0165, 0111, 0096, 0080, 0056, 0029, 0028, 0027, 0021, 0020, 0019, 0016
<b>Teknika</b>	0054, 0180, 0150, 0060, 0092, 0016, 0019, 0039, 0056, 0175, 0179, 0186, 0312, 0322	<b>Waycon</b>	0156
<b>Telefunken</b>	0702, 0056, 0074	<b>Westinghouse</b>	0885, 0889, 0890, 1282, 1577
<b>Tera</b>	0031	<b>White Westinghouse</b>	0463, 0623
<b>Thomson</b>	0209, 0210	<b>Wyse</b>	1365
<b>TMK</b>	0178, 0056, 0177	<b>Yamaha</b>	0030, 0019, 0769, 0797, 0833, 0839
<b>TNCi</b>	0017	<b>Zenith</b>	0017, 0463, 1265, 0178, 0092, 0016
<b>Toshiba</b>	0154, 1256, 0156, 1265, 0060, 1945, 1935, 1704, 1656, 1635, 1356, 1343, 1325, 1306, 1156, 0845, 0832, 0650, 0149, 0036	<b>Zonda</b>	0003

## TVs (LCD)

<b>Accurian</b>	1803	<b>Jensen</b>	1299	<b>Sharp</b>	0093, 0818, 1602
<b>Action</b>	0873	<b>Kost</b>	1262	<b>Sherwood</b>	1399
<b>Akai</b>	1935	<b>LG</b>	0856, 1178, 1993	<b>Signet</b>	1262
<b>AOC</b>	1365	<b>Magnavox</b>	1454, 0802, 1198	<b>Sony</b>	0810
<b>Apex Digital</b>	0890, 1217	<b>Marantz</b>	0855	<b>Sova</b>	1320
<b>Astar</b>	1548	<b>Maxent</b>	0762, 1211	<b>Soyo</b>	1520
<b>Audiovox</b>	0180, 0710, 0802, 0846, 0875, 1284, 1937, 1951, 1952	<b>Mintek</b>	1603, 1990	<b>Superscan</b>	0864
<b>BenQ</b>	1315	<b>Mitsubishi</b>	1250	<b>SVA</b>	0587, 0870, 0871
<b>Byd:sign</b>	1309, 1311	<b>NetTV</b>	0762	<b>Sylvania</b>	0171, 1271
<b>Cadia</b>	1283	<b>Norcent</b>	1365, 1589, 1591	<b>Symphonic</b>	0171
<b>CyberHome</b>	0749	<b>Norwood Micro</b>	1286, 1296	<b>Syntax</b>	1144, 1240, 1331
<b>Dell</b>	1080, 1178, 1264	<b>Olevia</b>	1144, 1240, 1331, 1610	<b>Tatung</b>	1286
<b>Emprex</b>	1422, 1546	<b>Panasonic</b>	0650, 1941	<b>Techview</b>	0847
<b>Envision</b>	0813, 1365	<b>Petters</b>	1523	<b>Toshiba</b>	0845, 1343, 1635, 1656
<b>FlexVision</b>	0710	<b>Philips</b>	1454, 1483	<b>Ultra</b>	1323
<b>Funai</b>	0171	<b>Polaroid</b>	1262, 1276, 1316, 1341, 1498, 1523	<b>US Logic</b>	1286
<b>Go Video</b>	0886	<b>Protron</b>	1320, 1323	<b>Vidikron</b>	1398
<b>Hannspree</b>	1348, 1351	<b>Proview</b>	1401	<b>Viewsonic</b>	0857, 0864, 0885, 1330, 1578, 1627
<b>Hewlett Packard</b>	1088	<b>RCA</b>	0047, 1958	<b>Visart</b>	1336
<b>HP</b>	1088	<b>Sampo</b>	0762	<b>Vizio</b>	0864, 0885, 1756
<b>Hyundai</b>	0849, 1219, 1294	<b>Samsung</b>	0812, 0766, 0814, 1395, 1575	<b>Westinghouse</b>	0885, 0889, 0890, 1282, 1577
<b>iLo</b>	1286, 1603, 1990	<b>Sansui</b>	1409	<b>Wyse</b>	1365
<b>Initial</b>	1603, 1990	<b>Sanyo</b>	1142	<b>Zenith</b>	1265
<b>Insignia</b>	1204, 1517, 2002	<b>Sceptre</b>	0878, 1217, 1360, 1599		

**TV/VCR Combos**    Controlled by the TV

<b>America Action</b>	0180
<b>Audiovox</b>	0180
<b>Emerson</b>	0236

**TV/VCR/DVD Combos**    Controlled by the VCR

<b>Sharp</b>	0807
--------------	------

**TV/VCR Combos**    Controlled by the VCR

<b>America Action</b>	0278	<b>LG</b>	1037	<b>RadioShack</b>	0000, 1037
<b>Audiovox</b>	0278	<b>Lloyd's</b>	0000	<b>RCA</b>	0240, 1035, 1807, 1060
<b>Broksonic</b>	0002, 0479, 1479	<b>Magnasonic</b>	0593, 1278	<b>Samsung</b>	1014
<b>Citizen</b>	1278	<b>Magnavox</b>	0000, 0593, 1781	<b>Sansui</b>	0000, 0479, 1479
<b>Colt</b>	0072	<b>Magnin</b>	0240	<b>Sanyo</b>	0240
<b>Curtis Mathes</b>	1035	<b>Memorex</b>	0162, 0454, 1037, 1162, 1237, 1262	<b>Sears</b>	0000, 1237
<b>Daewoo</b>	0637, 1278	<b>MGA</b>	0240	<b>Sony</b>	0000, 1232
<b>Emerson</b>	0002, 0294, 0479, 0593, 1278, 1479	<b>Mitsubishi</b>	0807	<b>Sylvania</b>	1781
<b>Funai</b>	0000	<b>Optimus</b>	0162, 0454, 0593, 1162, 1262	<b>Symphonic</b>	0000, 0593
<b>GE</b>	0240, 0807, 1035, 1060	<b>Orion</b>	0002, 0479, 1479	<b>Thomas</b>	0000
<b>GoldStar</b>	1237	<b>Panasonic</b>	0162, 1035, 1162, 1262	<b>Toshiba</b>	0845, 1145
<b>Harley Davidson</b>	0000	<b>Penney</b>	0240, 1035, 1237	<b>White Westing.</b>	0637
<b>Hitachi</b>	0000	<b>Quasar</b>	0162, 1035, 1162	<b>Zenith</b>	0000, 0479, 0637, 1479

**TV/VCR/DVD Combos**    Controlled by the TV

<b>Akai</b>	1903	<b>Panasonic</b>	1946, 1947
<b>Broksonic</b>	1938	<b>Polaroid</b>	1992
<b>Diamond Vision</b>	1996	<b>RCA</b>	1953
<b>Emerson</b>	1944	<b>Sylvania</b>	1944
<b>ESA</b>	1944	<b>Symphonic</b>	1944
<b>Magnavox</b>	1944	<b>Toshiba</b>	1945

**TV/VCR/DVD Combos**    Controlled by the DVD

<b>Akai</b>	0899	<b>Polaroid</b>	1482
<b>Broksonic</b>	0868	<b>RCA</b>	1132
<b>Diamond Vision</b>	1609	<b>Sharp</b>	0630
<b>Emerson</b>	0821	<b>Superscan</b>	0821
<b>ESA</b>	0821	<b>Sylvania</b>	0821
<b>Funai</b>	1334	<b>Symphonic</b>	0821
<b>Magnavox</b>	0821	<b>Toshiba</b>	1045
<b>Panasonic</b>	1362, 1462		

**VCRs**

<b>ABS</b>	1972	<b>DirecTV</b>	0739
<b>Admiral</b>	0048, 0209	<b>Durabrand</b>	0039, 0038
<b>Adventura</b>	0000	<b>Dynatech</b>	0000
<b>Aiko</b>	0278	<b>Electrohome</b>	0037
<b>Aiwa</b>	0037, 0000, 0124, 0307, 0468	<b>Electroponic</b>	0037
<b>Akai</b>	0041, 0049, 0053, 0061, 0106, 0175	<b>Emerex</b>	0032
<b>Alienware</b>	1972	<b>Emerson</b>	0037, 0184, 0000, 0121, 0043, 0209, 0002, 0278, 1479, 1278, 0637, 1593, 0593, 0561, 0510, 0479, 0361, 0295, 0294, 0212, 0211, 0208, 0088, 0068, 0061, 0036
<b>America Action</b>	0278	<b>Fisher</b>	0047, 0104, 0054, 0066
<b>American High</b>	0035	<b>Fuji</b>	0035, 0033
<b>Asha</b>	0240	<b>Funai</b>	0000, 0593, 1593
<b>Audiovox</b>	0037, 0278	<b>Garrard</b>	0000
<b>Beaumarck</b>	0240	<b>Gateway</b>	1972
<b>Bell &amp; Howell</b>	0104	<b>GE</b>	0060, 0035, 0240, 0065, 0202, 0760, 0761, 0807, 1035, 1060
<b>Broksonic</b>	0184, 0121, 0209, 0002, 0211, 0295, 0361, 0479, 1479, 1815	<b>Go Video</b>	0232, 0279, 0432, 0526, 0643
<b>Calix</b>	0037	<b>GoldStar</b>	0037, 0038, 0018, 1237
<b>Canon</b>	0035, 0102	<b>Gradiente</b>	0000, 0408
<b>Capehart</b>	0020	<b>Grundig</b>	0195
<b>Carver</b>	0081	<b>Harley Davidson</b>	0000
<b>CCE</b>	0072, 0278	<b>Harman/ Kardon</b>	0081, 0038, 0075
<b>Citizen</b>	0037, 0278, 1278	<b>Harwood</b>	0072, 0068
<b>Colt</b>	0072	<b>Headquarter</b>	0046
<b>Craig</b>	0037, 0047, 0240, 0072, 0271	<b>Hewlett Packard</b>	1972
<b>Curtis Mathes</b>	0060, 0035, 0162, 0041, 0760, 1035	<b>HI-Q</b>	0047
<b>Cybernex</b>	0240, 0051	<b>Hitachi</b>	0000, 0042, 0041, 0065, 0082, 0089, 0105, 0166
<b>CyberPower</b>	1972	<b>Howard Comp.</b>	1972
<b>Daewoo</b>	0045, 0278, 0020, 0561, 0637, 1278	<b>HP</b>	1972
<b>Daytron</b>	0020	<b>Hughes Network</b>	0042, 0739
<b>Dell</b>	1972	<b>Humax</b>	0739
<b>Denon</b>	0042	<b>Hush</b>	1972

<b>iBUYPOWER</b>	1972	<b>Quarter</b>	0046
<b>Jensen</b>	0041	<b>Quartz</b>	0046
<b>JVC</b>	0067, 0041, 0008, 0206, 0207, 0384, 1707	<b>Quasar</b>	0035, 0162, 0077, 0454, 1035, 1162
<b>KEC</b>	0037, 0278	<b>RadioShack</b>	0000, 1037
<b>Keen</b>	0693	<b>Radix</b>	0037
<b>Kenwood</b>	0067, 0041, 0038, 0384	<b>Randex</b>	0037
<b>KLH</b>	0072	<b>RCA</b>	0060, 0240, 0042, 0149, 0058, 0065, 0077, 0105, 0106, 0202, 0760, 0761, 0807, 0880, 1035, 1060
<b>Kodak</b>	0035, 0037	<b>Realistic</b>	0035, 0037, 0048, 0047, 0000, 0104, 0046, 0062, 0066
<b>LG</b>	1037	<b>ReplayTV</b>	0614, 0616
<b>Linksys</b>	1972	<b>Ricavision</b>	1972
<b>Lloyd's</b>	0000, 0208	<b>Ricoh</b>	0034
<b>Logik</b>	0072	<b>Runco</b>	0039
<b>LXI</b>	0037	<b>Salora</b>	0075
<b>Magnasonic</b>	0593, 1278	<b>Samsung</b>	0240, 0045, 0051, 0053, 0739, 1014
<b>Magnavox</b>	0035, 0039, 0081, 0000, 0149, 0110, 0563, 0593, 1593, 1781	<b>Samtron</b>	0643
<b>Magnin</b>	0240	<b>Sanky</b>	0048, 0039
<b>Marantz</b>	0035, 0081	<b>Sansui</b>	0000, 0067, 0209, 0041, 0082, 0271, 0479, 1479
<b>Marta</b>	0037	<b>Sanyo</b>	0047, 0240, 0104, 0046, 0159
<b>Matsushita</b>	0035, 0162, 1162	<b>Scott</b>	0184, 0045, 0121, 0043, 0210, 0211, 0212
<b>Media Center PC</b>	1972	<b>Sears</b>	0035, 0037, 0047, 0000, 0042, 0104, 0046, 0054, 0066, 0105, 1237
<b>MEI</b>	0035	<b>Sharp</b>	0048, 0062, 0807, 0848
<b>Memorex</b>	0035, 0162, 0037, 0048, 0039, 0047, 0240, 0000, 0104, 0209, 0046, 0307, 0454, 0479, 1037, 1162, 1237, 1262	<b>Shintom</b>	0072
<b>MGA</b>	0240, 0043, 0061	<b>Shogun</b>	0240, 0051
<b>MGN Technology</b>	0240	<b>Singer</b>	0072
<b>Microsoft</b>	1972	<b>Sonic Blue</b>	0614, 0616
<b>Mind</b>	1972	<b>Sony</b>	0035, 0032, 0033, 0000, 0011, 0034, 0636, 1032, 1232, 1972
<b>Minolta</b>	0042, 0105	<b>Stack 9</b>	1972
<b>Mitsubishi</b>	0067, 0043, 0061, 0075, 0173, 0443, 0807	<b>STS</b>	0042
<b>Motorola</b>	0035, 0048	<b>Sylvania</b>	0035, 0081, 0043, 0000, 0110, 0593, 1593, 1781
<b>MTC</b>	0240, 0048	<b>Symphonic</b>	0000, 0593, 1593
<b>Multitech</b>	0000, 0072	<b>Systemax</b>	1972
<b>NAD</b>	0058	<b>Tagar Systems</b>	1972
<b>NEC</b>	0104, 0067, 0041, 0038, 0040, 0050, 0082	<b>Tatung</b>	0041
<b>Nikko</b>	0037	<b>Teac</b>	0000, 0041
<b>Nikon</b>	0034	<b>Technics</b>	0035, 0162
<b>Niveus Media</b>	1972	<b>Teknika</b>	0035, 0037, 0000, 0052
<b>Noblex</b>	0240	<b>Thomas</b>	0000
<b>Northgate</b>	1972	<b>Tivo</b>	0618, 0636, 0739, 1996
<b>Olympus</b>	0035, 0226	<b>TMK</b>	0240, 0036, 0208
<b>Onkyo</b>	0222	<b>Toshiba</b>	0045, 0043, 0066, 0210, 0212, 0366, 0845, 1008, 1145, 1972, 1996
<b>Optimus</b>	1062, 0162, 0037, 0048, 0104, 0058, 0432, 0454, 0593, 1048, 1162, 1262	<b>Totevision</b>	0037, 0240
<b>Optonica</b>	0062	<b>Touch</b>	1972
<b>Orion</b>	0184, 0209, 0002, 0295, 0479, 1479	<b>Unitech</b>	0240
<b>Panasonic</b>	1062, 0035, 0162, 0077, 0102, 0225, 0226, 0227, 0378, 0454, 0616, 1035, 1162, 1262	<b>Vector</b>	0045
<b>Penney</b>	0035, 0037, 0240, 0042, 0038, 0040, 0054, 1035, 1237	<b>Vector Research</b>	0038, 0040
<b>Pentax</b>	0042, 0065, 0105	<b>Video Concepts</b>	0045, 0040, 0061
<b>Philco</b>	0035	<b>Videomagic</b>	0037
<b>Philips</b>	0035, 0081, 0062, 0110, 0618, 0739, 1081, 1181	<b>Videosonic</b>	0240
<b>Pilot</b>	0037	<b>Viewsonic</b>	1972
<b>Pioneer</b>	0067, 0058	<b>Villain</b>	0000
<b>Polk Audio</b>	0081	<b>Voodoo</b>	1972
<b>Portland</b>	0020	<b>Wards</b>	0060, 0035, 0048, 0047, 0081, 0240, 0000, 0042, 0072, 0149, 0062, 0212, 0760
<b>Presidian</b>	1593	<b>White West.</b>	0209, 0072, 0637
<b>Profitronic</b>	0240	<b>XR-1000</b>	0035, 0000, 0072
<b>Proscan</b>	0060, 0202, 0760, 0761, 1060	<b>Yamaha</b>	0038
<b>Protec</b>	0072	<b>Zenith</b>	0039, 0033, 0000, 0209, 0034, 0479, 0637, 1139, 1479
<b>Pulsar</b>	0039, 0051	<b>ZT Group</b>	1972